


Assembly Guide

T10-20

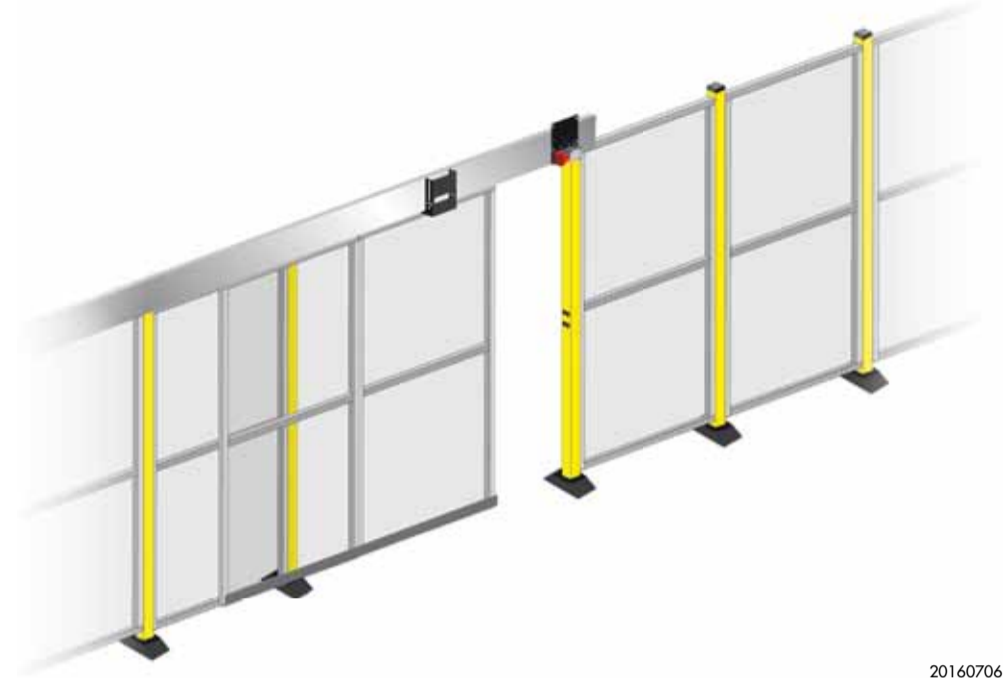


20160706







Axellent AB
 Box 1 · Kävsjövägen 17
 SE-330 33 Hillerstorp
 Axellent Direct. 0370-37 37 37
 Fax. 0370-37 37 47
 E-mail. sales@axellent.se
 Internet. www.axellent.se


BG	Инструкции за монтаж	IT	Istruzioni di montaggio
CZ	Montážní návod	LT	Surinkimo instrukcija
DE	Montageanleitung	LV	Montāžas instrukcijas
DK	Monteringsvejledning	MT	Assemblagg istruzzjonijiet
EE	Paigaldusjuhised	NL	Montagehandleiding
ES	Instrucciones de montaje	PL	Instrukcja montażu
FI	Kokoamisohje	PT	Instruções de montagem
FR	Les instructions d'assemblage	RO	Instrucțiunile de asamblare
GB	Assembly instructions	SE	Monteringsanvisning
GR	οδηγίες συναρμολόγησης	SI	Sestavljanje navodila
HU	Összeszerelési utasítások	SK	Montážny návod
IE	Teoracha cóimeála		

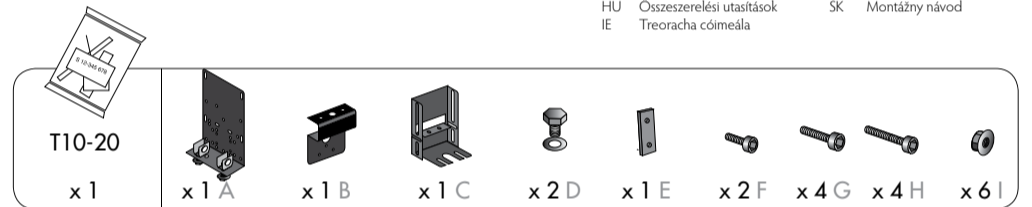


AXELENT X-GUARD T10-20

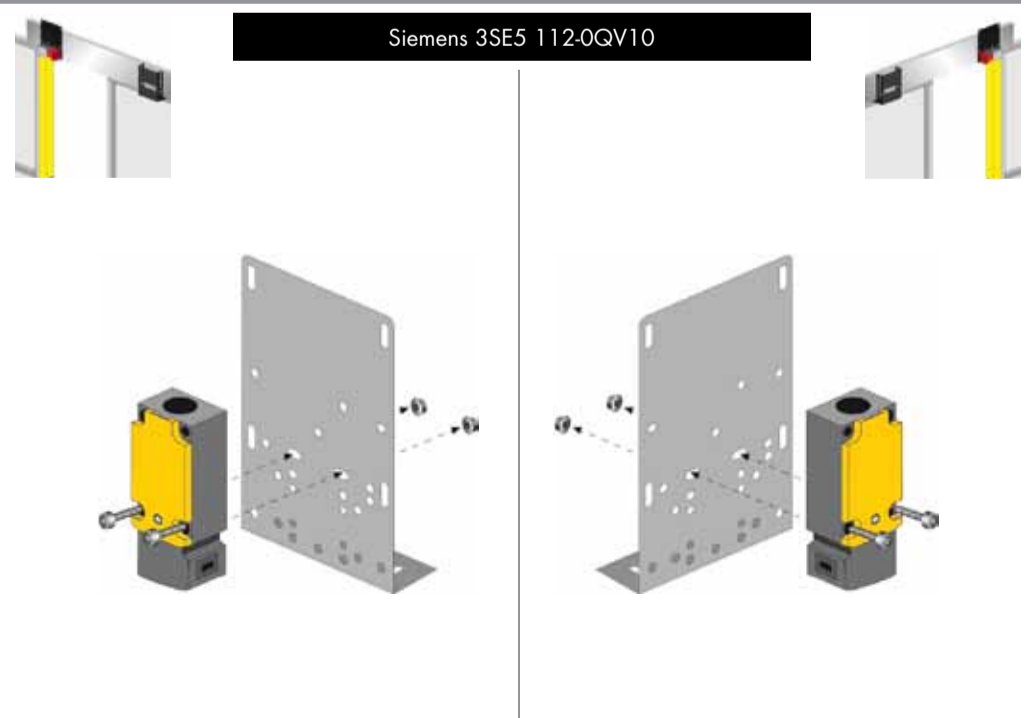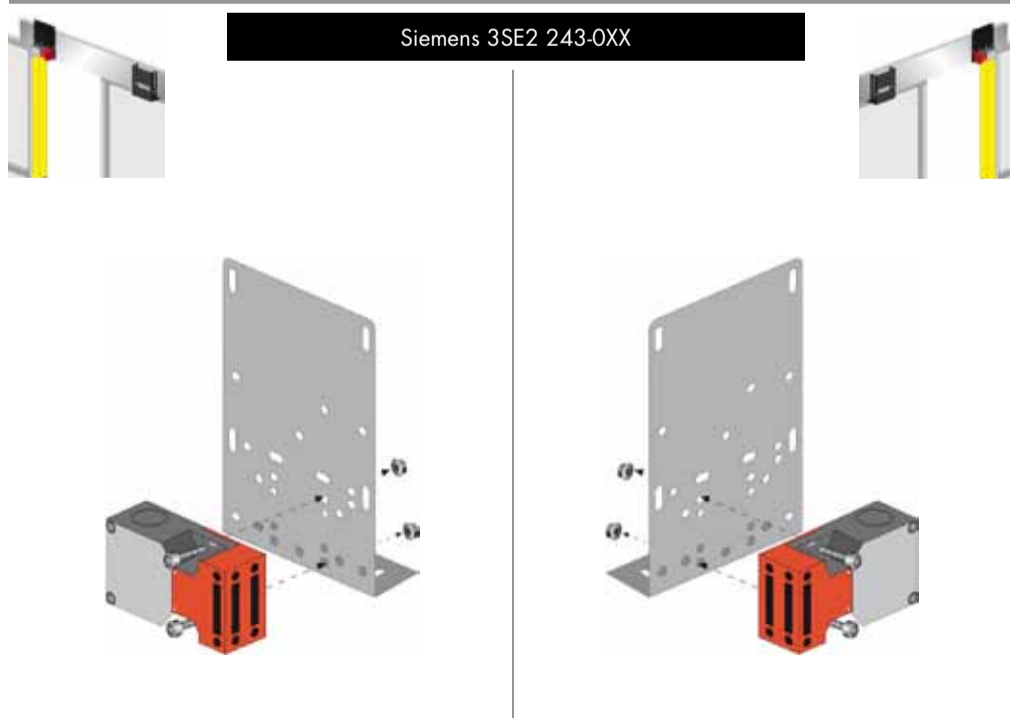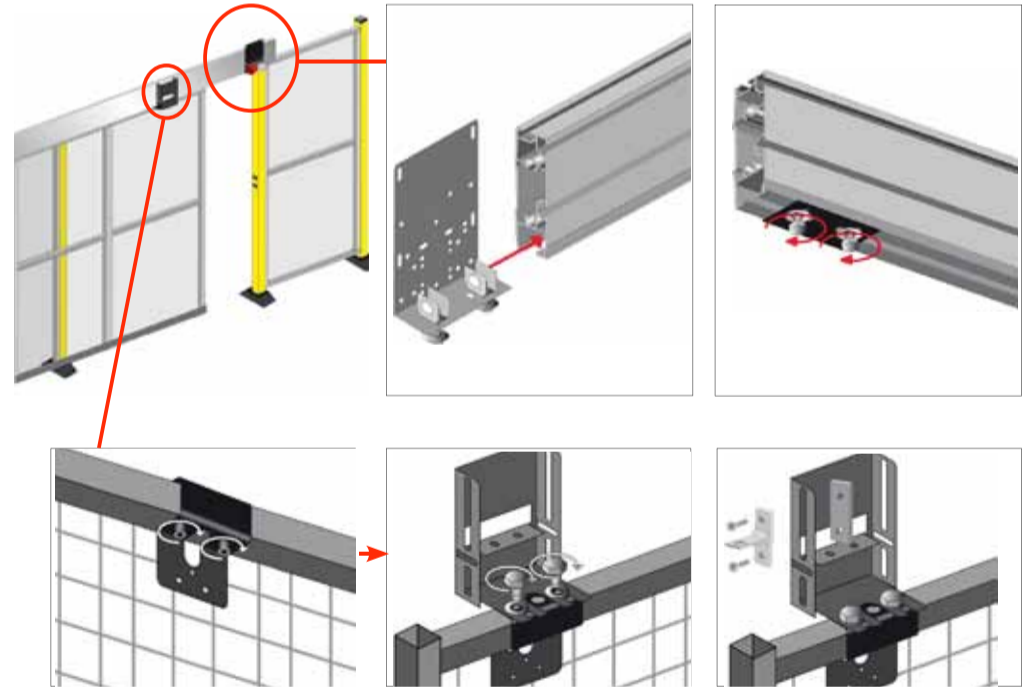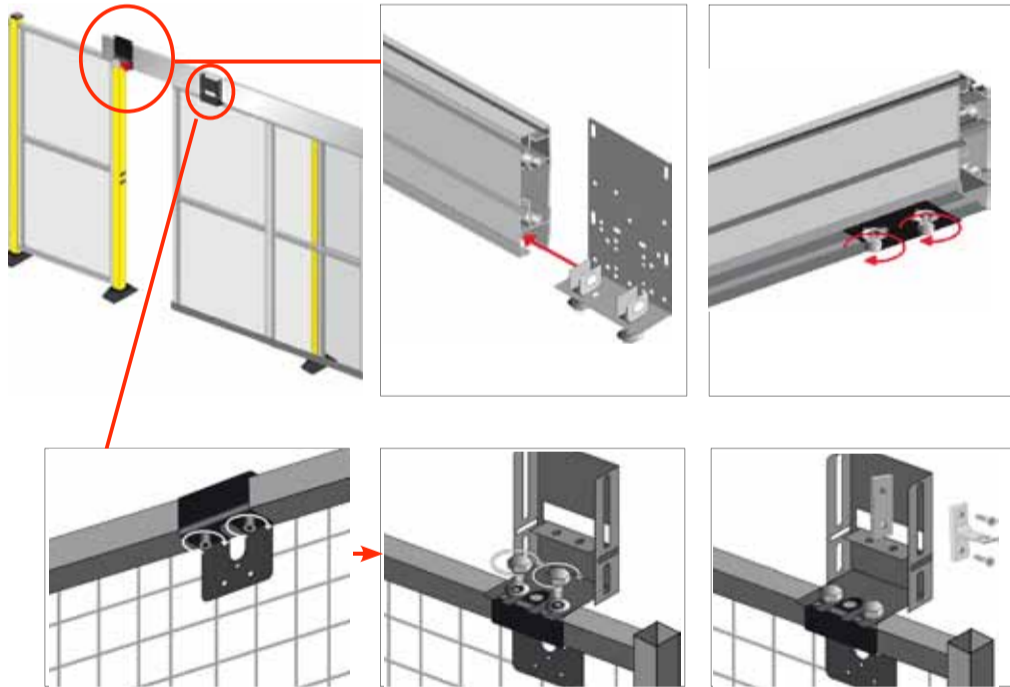


Siemens 3SE5 232-0QV40

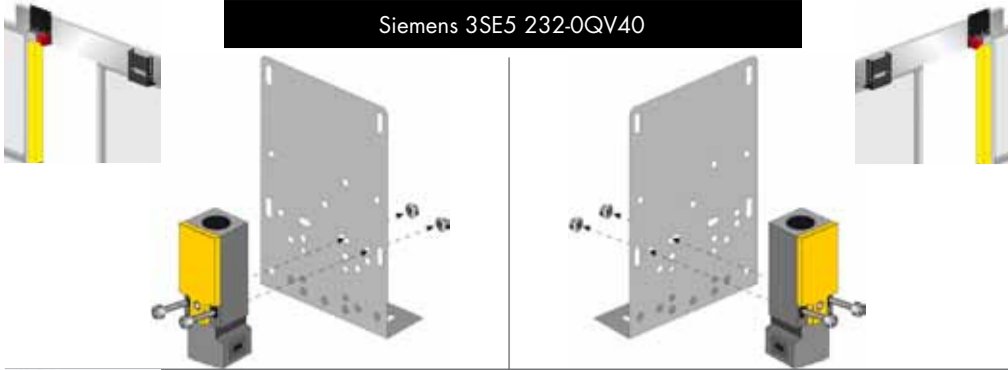


Allen Bradley Trojan 5

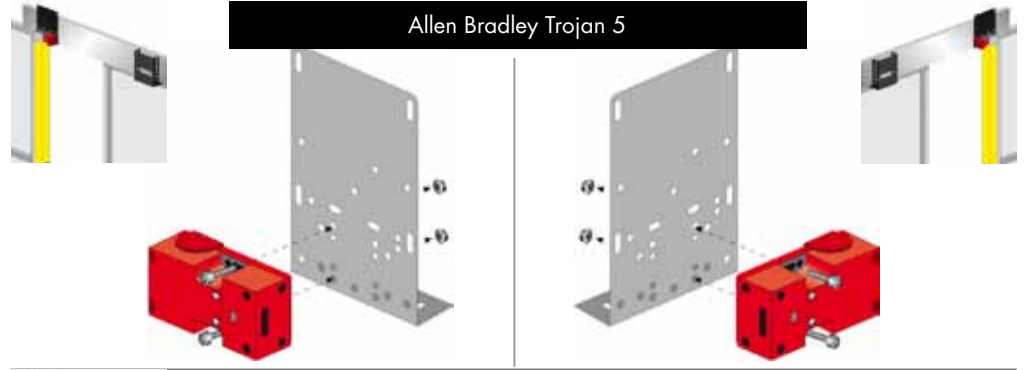


Siemens 3SE5 312-0SB11

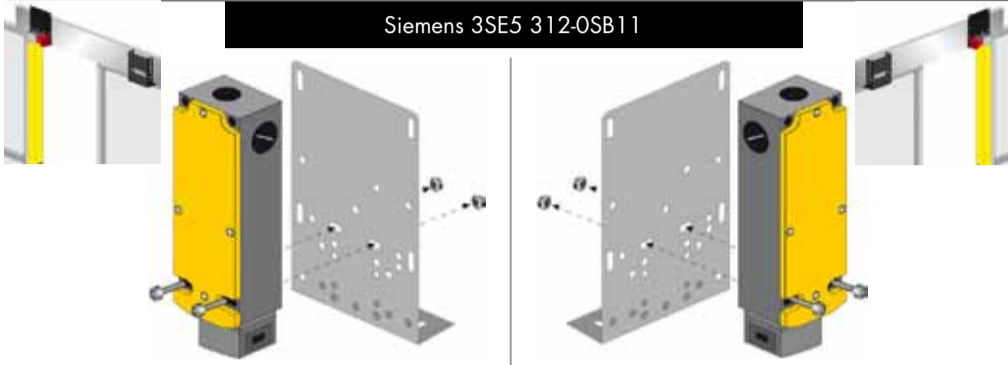


Euchner NP

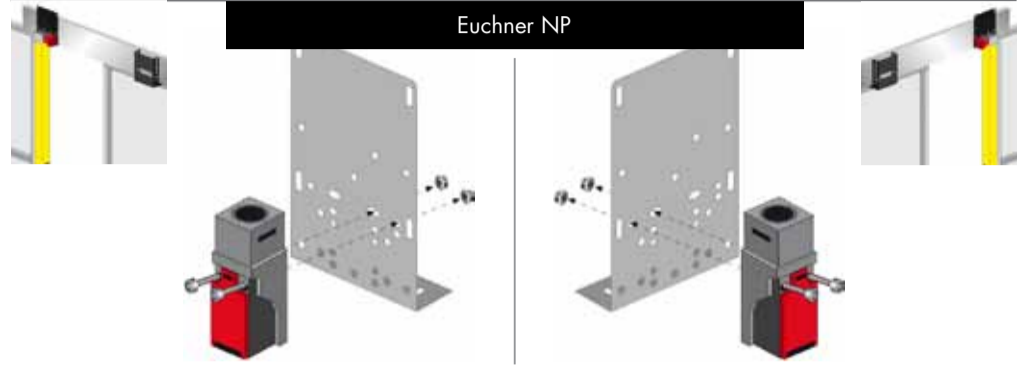


Siemens 3SE5 312-0SD11

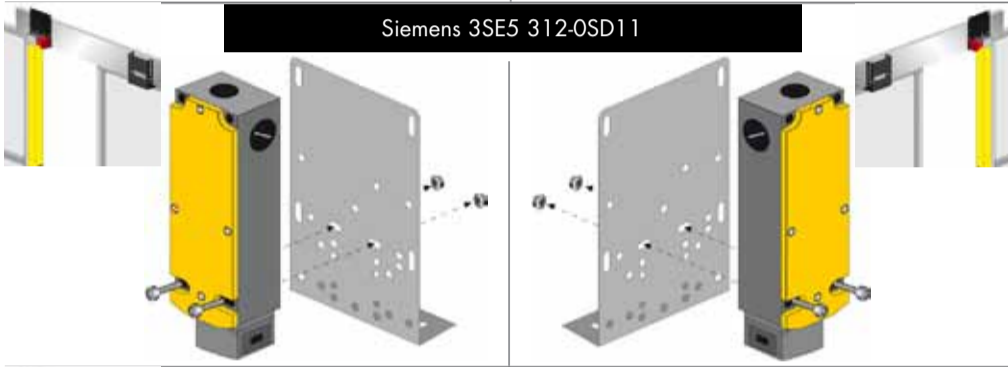


Euchner NZ/VZ

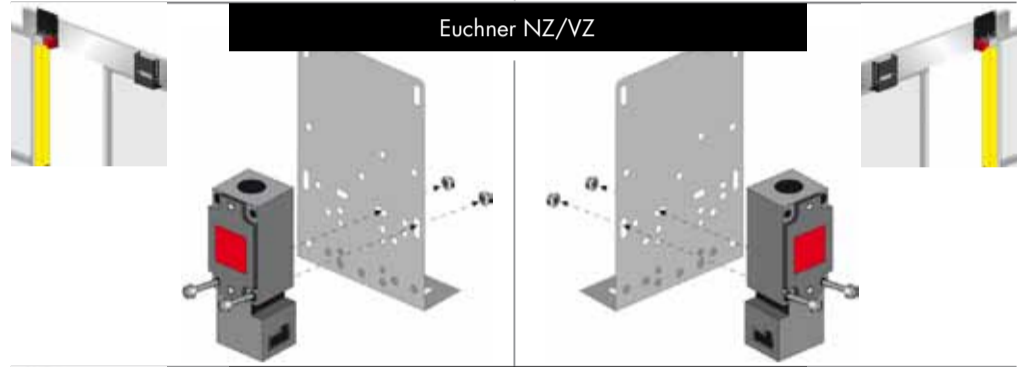

Allen Bradley TLS2-GD2

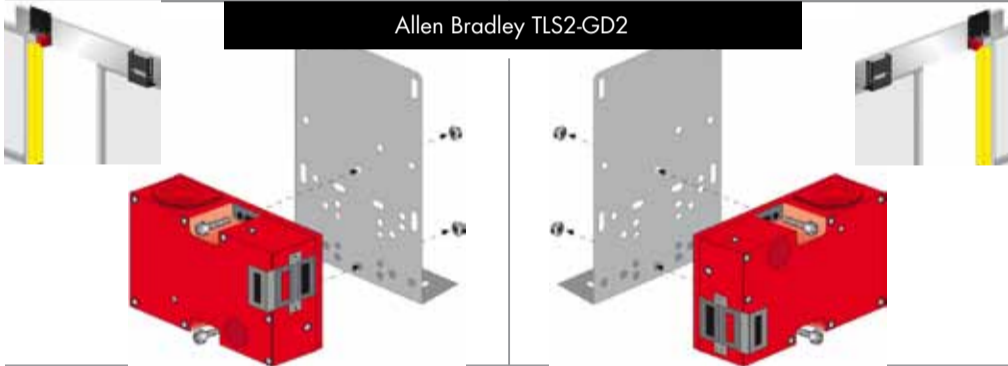


Euchner TP

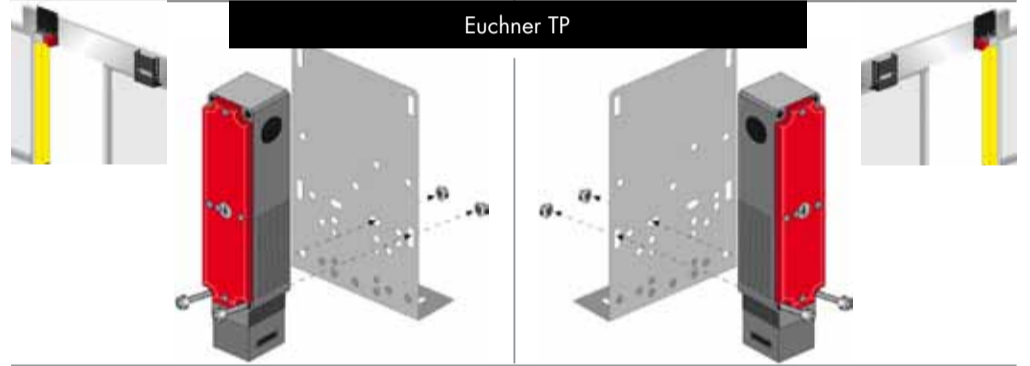


20160706


Euchner TZ

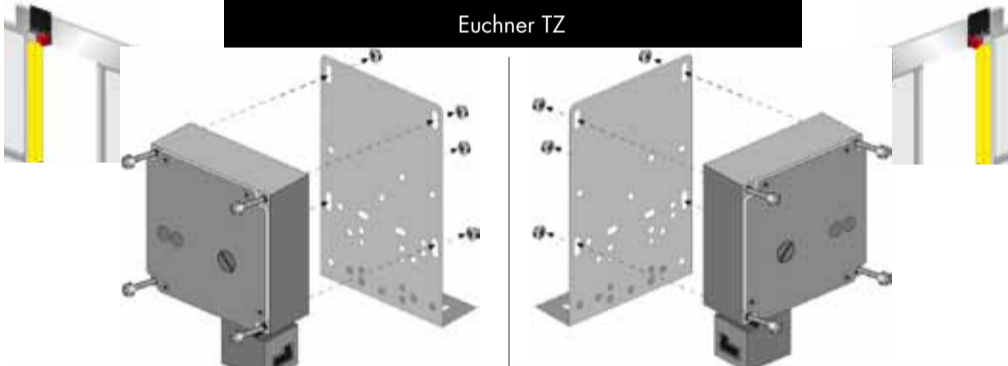


Telemecanique XCS A 701

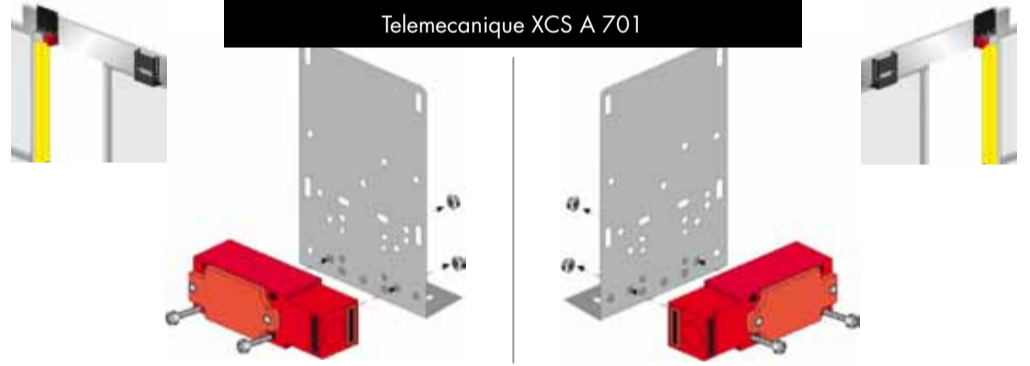


Jokab JSNY5A

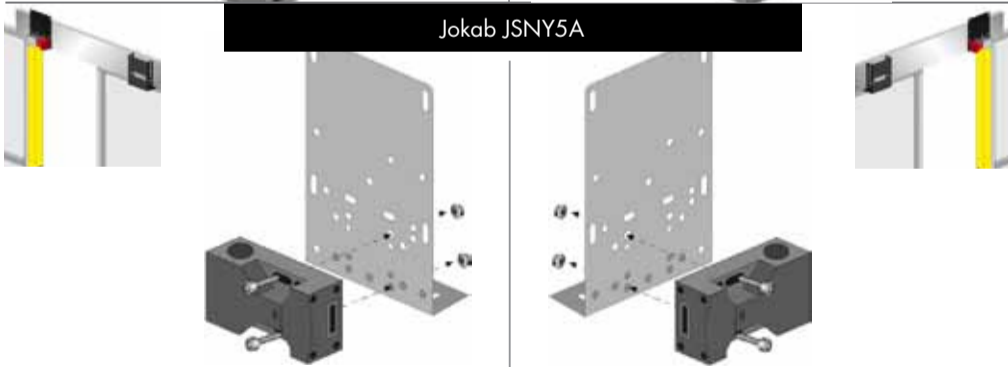


Telemecanique XCS TA 791

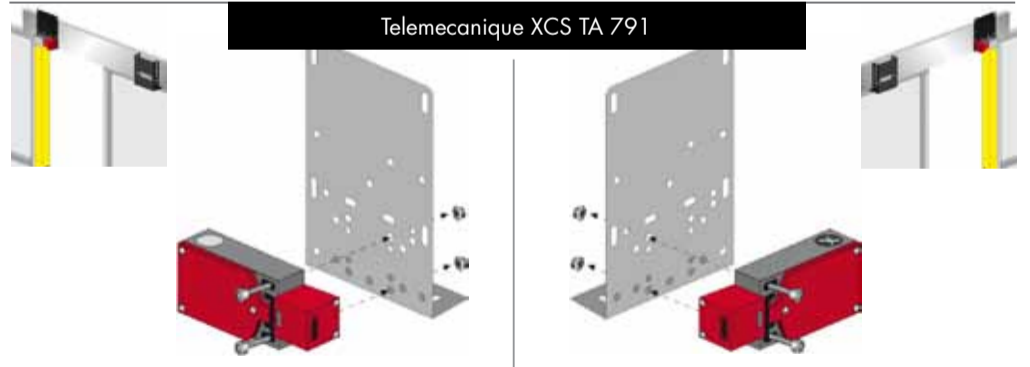


Schmersal AZ 16-12

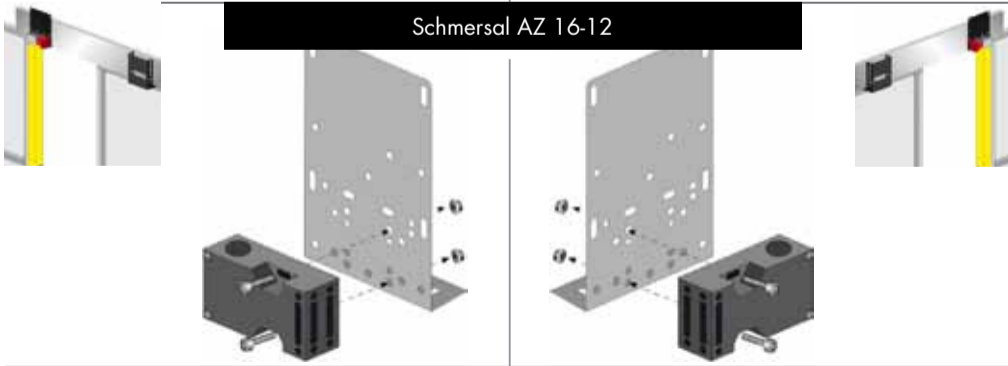


Telemecanique XCSE 7311

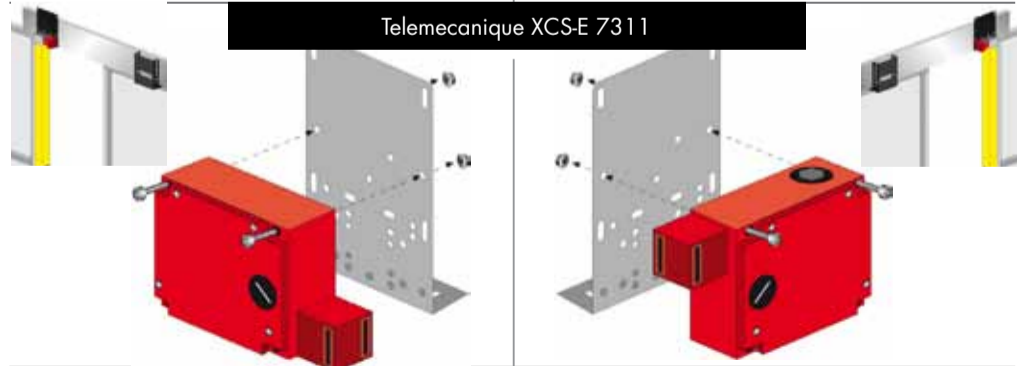

Schmerzal AZM161

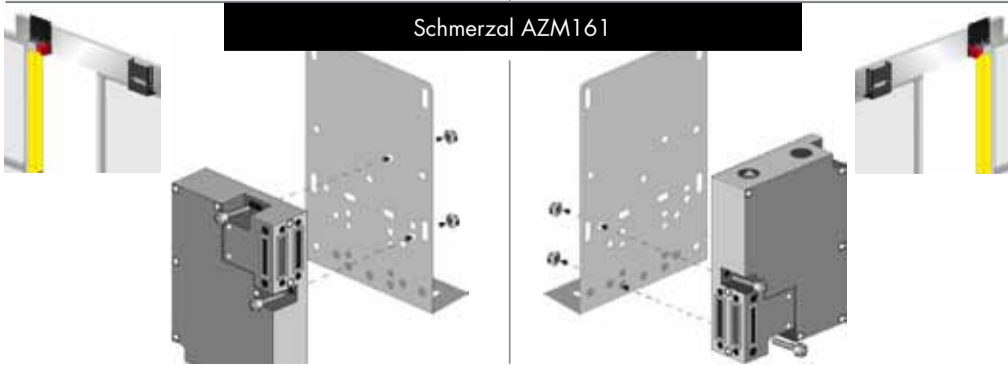

Telemecanique XCS-TE

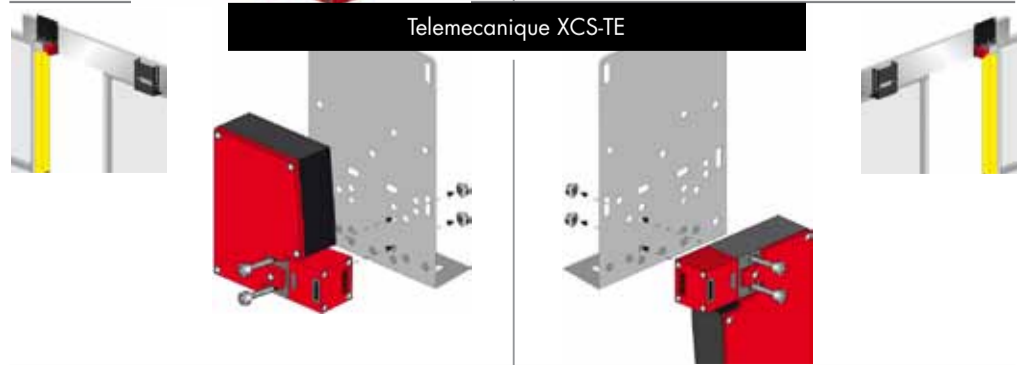

20160706